

Biathlon – Start number terminal



0-9 Enter start number IN
(confirm by pressing Enter)

* Enter start number OUT
(confirm by pressing Enter)

/ Switch stage (Stand / Prone)

Enter Confirm

+ / - Toggle lane

Del / ← Delete / Rectify start number

Biathlon – Coach Display



0-9 Select lane
(confirm by pressing Enter)

Enter Toggle field

+ / - Adjust number of lanes (fields)

* Toggle zoom level

/ Reset target / Switch stage
(Training/Zeroing only)

Del / ← Rectify lane number