

Biathlon – Start number terminal



0-9 Enter start number IN
(confirm by pressing Enter)

* / UT Enter start number OUT
(bekreft med Enter)

/ Switch stage (Stand / Prone)

Bekreft / Enter Confirm

↑ (+) / ↓ (-) Toggle lane

Slett / Del Delete / Rectify start number

Biathlon – Coach Display



0-9 Select lane
(confirm by pressing Enter)

Enter Toggle field

+ / - Adjust number of lanes (fields)

* Toggle zoom level

/ Reset target / Switch stage
(Training / Zeroing only)

C / Del Rectify lane number