



# Megalink USB adapter

Please install the Megalink software bundle  
**before** connecting the USB adapter

The ML2000 system is connected to the range computer using the Megalink USB adapter.

#### MLRange:

1. Download and install MLSetup.exe from [www.megalink.no](http://www.megalink.no)
2. Connect the USB adapter to the range computer
3. Goto *File* → *Interface*
4. Click *Search for new*
5. Select channel type USB with the correct ID (ML10XXXX) for each channel.

#### MLShoot:

1. Download and install MLShootSetup.exe from [www.megalink.no](http://www.megalink.no)
2. Connect the USB adapter to the computer
3. Goto *File* → *Interface*
4. Select the adapter with the correct ID (ML10XXXX)



For more please see the  
FAQ section on:

[www.megalink.no](http://www.megalink.no)



# Megalink USB adapter

Vennligst installer programvaren **før** du  
kobler til USB adapter

#### MLLeder:

1. Last ned og installer MLSetup.exe fra [www.megalink.no](http://www.megalink.no)
2. Koble til USB adapteret
3. Trykk på *Fil* → *Grensesnitt*
4. Trykk på *Søk etter nye*
5. Velg kanaltype er lik USB med riktig ID (ML10XXXX) for hver kanal.

#### MLShoot:

1. Last ned og installer MLShootSetup.exe fra [www.megalink.no](http://www.megalink.no)
2. Koble til USB adapteret
3. Trykk på *Fil* → *Grensesnitt*
4. Velg adapteret med riktig ID (ML10XXXX)



For mer informasjon se  
Ofte Stilte Spørsmål på:

[www.megalink.no](http://www.megalink.no)